

# RT-M1000+T/V

## CBL+TV Remote Control



### Programming And Operating Instructions

To have a clearer idea of the features and capabilities of your remote control, take a moment to read these instructions. Save for future reference.

### 1. Introduction

Your remote control is simple to program, easy to use, and can operate two (2) electronic devices, which include :

- CABLE** Motorola DCT Cable set-top terminals
- TV** Televisions

Before you can use your remote control, it must be programmed (set-up) to operate your TV.

### 2. Before Getting Started

Some of the special features on your remote control are as follows :

#### Point and Press® Programming

Lets you program your TV without codes. For more information, see Section 5.

#### Time Out

Shuts remote off if any button is pressed and held for 45-seconds. This extends battery life in the event the remote becomes lodged under or between heavy objects.

### 3. Installing / Replacing Batteries

Install two (2) new "AAA" batteries as indicated by the diagram in the battery compartment.

When the batteries become low and need to be replaced, the LED will not illuminate normally or at all during use.

When this happens, replace the existing batteries with two (2) new "AAA" batteries to restore normal operation to the remote control.

### 4. Programming Your TV

If you have a TV that's operated by remote control,

it is recommended that you plug it directly into a wall outlet instead of the cable set-top terminal.

#### Code-Entry Programming...

1. Turn on TV.
2. Press [OK], then [MUTE] together until the LED illuminates.
3. Locate the 3-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off.

If multiple codes are listed for your brand, you may have to enter several different codes until your TV turns off.

4. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].

a. If the TV turns back on, press [OK] to lock in the code. The LED will blink and go out.

Or

b. If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [OK] to lock in the code. The LED will blink and go out.

#### Point and Press® Programming...

1. Turn on TV.
2. Press [OK], then [MUTE] together until the LED illuminates.
3. Press and hold the [CH ▲] button until one device turns off. While you are pressing the [CH ▲] button, the LED will blink. As soon as one device turns off, release the [CH ▲] button.
4. Press [MUTE]. If the device that turned off...

- a. Turns back on, press [OK] to lock in this code. The LED will blink and go out.

Or

- b. Does not turn back on, press [CH ▼] one step at a time until that device turns back on. Each time you press the [CH ▼] button, the LED will blink.

Once you have found a code that turns the device on / off, press [OK] to lock in this code. The LED will blink and go out.

### 5. Programming Volume Control

To program volume control to Cable set-top terminal...

1. Press [CBL], then [OK] together until the LED illuminates.

2. Press [VOL ▲], then [CBL] for Cable volume.

3. The LED will blink and go out.

To program volume control to TV...

1. Press [CBL], then [OK] together until the LED illuminates.

2. Press [VOL ▲], then [TV] for TV volume.

3. The LED will blink and go out.

### 6. Resetting Your Remote Control

To reset your remote to its factory default setting, follow these steps:

1. Press [CBL], then [OK] together until the LED illuminates.

2. Press [MENU], then [MENU] again. The LED will blink and go out.

### TV Set-up Codes

BRAND	CODE
Admiral	026 054 211
Advent	072 094 547 561
Adventura	047
Aiwa	214 585
Akai	053 576 587
Amark	023 215
Amstrad	157
Anam	217 218 219 220 221
AOC	053
APEX	030 038 549
Audiovox	220 579
Belcor	073
Bell & Howell	211
Broksonic	165 167
Brokwood	073
Candle	068 091
Centurion	095 107 108
Citizen	068 091 211 233
Concerto	073 095
Contec	147
Coronado	023
Craig	223
Crown	023
Curtis Mathes	016 054 107 108 211
Daewoo	051 068 073 095 158
	159 189 191 194 196
	197 198 200 202 204
	205 206 207 209
Daytron	073 095 107 108
Dumont	073
DELL	562
Dynex	423 546
Electro Home	073 095
Elektra	353
Emerson	016 023 053 064 103
	139 158 159 164 165
	166 167 168 169 392
	400 401 402 408 415
Envision	073 095
ESA	568 570
Fisher	355 356
Fujitsu	574 583
Funai	047

Gateway	548
GE	015 018 042 044 049
	054 055 068 073 090
	095 101 102 103 389
	390 396 403 406 407
Gibraltar	023 048 053 068 073
	090 095 107 108 233
Goldstar (LG)	360
	023 053 068 073 090
	107 108 233 360 361
GO-Video	558
Grundig	233
Hall Mark	073 095
Hitachi	023 068 095 096 097
	098 099 100
Hyundai	567
Inkel	364
Insigna	564 570 575 169 189
JC Penney	039 053 068 073 092
	095 102 355
JVC	104 105 106 396 397
	410
Kawasho	073 095
KMC	023
KONKA	559
KTV	023 053 233 366
Kurazai	211 213
LG (Goldstar)	023 053 068 073 090
	107 108 233 360 361
Lodgenet	211 213
Logik	211 213
Luxman	068 073 095
LXI	024 026 157
Magnavox (Philips)	023 068 071 073 089
	090 091 093 134 385
	387 397 404 577 586
Majestic	211 213
Marantz	053 107 108 109
Megatron	215
Memorex	090 211 213 355 388
	405
MGA / Mitsubishi	053 068 073 090 095
	107 109 110 216 384
	394 395 398 399 417
Mintek	584
Montgomery Ward	022 023 026 053 071
	072 108 211 213
NEC	028 068 090 108 200
	578

Norcent	569 586
Orion	019 159 160 161 162
	163 382
Panasonic	042 043 044 045 046
	551
Philco	023 053 068 071 072
	091 577
Philips (Magnavox)	023 068 071 073 072
	089 090 091 093 134
	385 387 397 404 577
Pilot	073 094 233
Pioneer	111 144 383
Planar	588
Portland	023 068
ProScan	055 070
Proton	090 371 372
Protron	571 581
Proview	573
Pulsar	073
Quasar	044
Radio Shack	073
Realistic	022 166 168
RCA	042 052 053 054 055
	069 070 416
Sampo	090 108
Samsung	015 016 017 023 031
	090 107 108 134 147
	151 153 386 411
Sansui	423 546
Sanyo	353 355 356 376 377
Sceptre	582
Scott	090 108 168
Sears	023 031 038 039 068
	353 355 356
Sharp	016 022 023 024 025
	026 027 028 029 393
	395 409
Signature 2000	023 026 108 211 213
Sony	014 020 021
Soundesign	091
Squareview	157
Supre-Macy	380
Sylvania	068 071 072 090 091
	093 107 108 157 158
	419 580
Symphonic	047 157
Tatung	044 560
Techwood	068
Teknika	023 068 072 091 168

Telerent	213 577
Tera	023 213
Tevion	381
TMK	065 414
Toshiba	068 090
Totevision	030 031 038 039
Universal	233
Vidtech	068 102
ViewSonic	550
Vizio	568 053
Wards	068 090
White Westinghouse	211 408 563 572
XR-1000	213
Yamaha	068
York	090 108
Zenith	047 048 049 050 051
	391 405 406 555

### 7. Additional Programming / Troubleshooting Information

1. If the same button is pressed and held for 45-seconds, your remote control will turn itself off automatically.

This extends the battery life should the remote become lodged under or between heavy objects, for example sofa cushions.

2. If you have a TV that's operated by remote control, it is recommended that you plug it directly into a wall outlet instead of the cable set-top terminal.

3. If you have any questions concerning the brand, model or operation of your cable set-top terminal, contact your cable operator.

Rev. 05/07

© 2007, Contec Holdings, LLC

Point and Press® is a registered trademark of Contec Holdings, LLC