


Operating Manual For Easy Clicker

UR3L-SR4

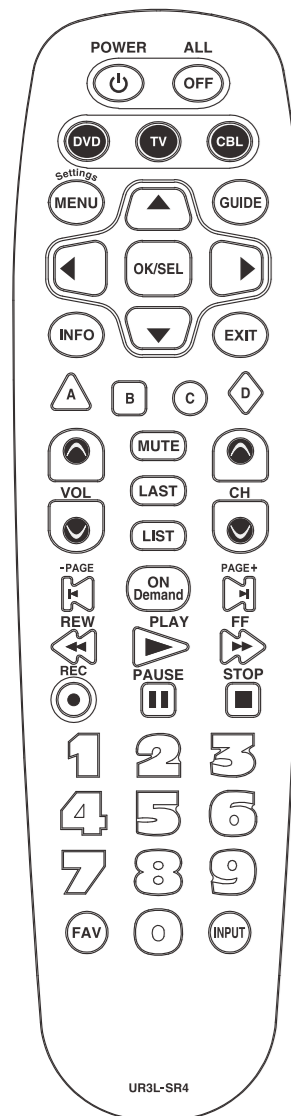

Universal Remote Control, Inc.
www.universalremote.com
OCE-0082B REV 1.4 (09/04/13)

1 Introduction

This remote control is designed to operate most IPTV and DTA STBs as well as Digital and Analog Cable Boxes.

2 Replacing Batteries


Before you program or operate the remote control, you must install two new AAA alkaline batteries.

STEP1 Remove the battery compartment cover from the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

Install two AAA alkaline batteries as shown here

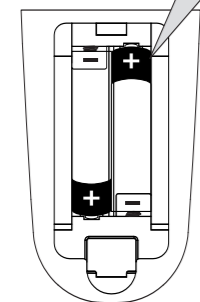

4 Programming the Remote Control

***Note:** In this section, when you are instructed to press a [DEVICE] button, that means you should press either the CBL, TV, or DVD button, depending on which device you are programming the remote to operate.

A. Quick Set-Up Method

STEP1 Turn on the component you want to program. To program your TV, turn on the TV.

3 Button Functions

POWER

Allows you to turn TV, DVD and Set top box On and Off.

CBL, TV, DVD Used to select the Device you want to operate and signals remote control activity.

SETTINGS / MENU Displays the settings Menu.

OK/SEL Selects highlighted screen options.

INFO Displays information about the program currently playing or highlighted in the program guide.

LAST Accesses the previously tuned channel.

VOL Raises or lowers the sound level.

LIST Displays a list of programs you have recorded, allowing you to select one for viewing.

VCR/DVD-VOD KEYS Perform standard VCR and DVD functions when in DVD mode, and Video On Demand functions when in VOD mode.

FAV Displays favorite channels.

ALL OFF

Designed to send Power On/Off commands for up to three Components with one buttons press.

GUIDE

Displays the program guide listings.

Highlight an item from the on-screen choices.

EXIT

Exit from current screen.

A, B, C, D Make direct selections from on-screen menus.

MUTE

Silences the audio. Press to activate. Press this key again to restore sound to previous level.

CH

Selects the next higher or lower channel.

ON Demand

Provides direct access to On Demand channel.

PAGE

Accesses pages above or below the information currently displayed.

NUMBER Pad

Enter numbers to tune to channels. Also make numeric entries on on-screen menus. You can also use the Ch/ and the guide as alternate ways to tune to channels.

INPUT

Selects the video source from available video components.

STEP3

Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set-up Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.

STEP3

Point the remote control at the component.

STEP4

Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.

Repeat the steps above for all components. (CBL, TV, DVD).

B. Quick Set-up Code Tables

Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

DVD

Quick Number	Manufacturer/Brand
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

C. Manual Programming

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three-digit code numbers are listed in the code tables sections of this instruction manual.

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

***Note:** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control.

control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

STEP4 Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

D. Auto Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Press the [CH▲] or [CH▼] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH▲] or [CH▼] button as soon as the equipment turns off.

***Note:** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct

code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.

STEP4 Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

E. To find the Three-Digit Code that Was Programmed using the Auto Search Method

STEP1 Press the appropriate [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [INFO] button. The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a one second interval of the LED being off.

Example: One blink, then three blinks, then eight blinks indicates the code number 138.

***Note:** Ten blinks indicates the number 0.

F. Programming a Second TV to the DVD Button

STEP1 Press the [DVD] button and the [OK/SEL] button simultaneously for 3 seconds. The DVD LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [TV] button.

STEP3 Point the remote control toward the TV and enter the three-digit code for your TV from the TV codes table.

STEP4 Store the three-digit code by pressing the [DVD] button.

G. The Learning Method

STEP1 Press the [Device] button (CBL, TV or DVD) to be programmed and the [INPUT] buttons simultaneously for 3 seconds until the Device LED light turns on.

STEP2 Line up the UR3L-SR4 to the other remote, head-to-head, 1 or 2 inches apart.

STEP3 Press any button on the UR3L-SR4 that you want to teach a command to. For example, if you want to teach the [MUTE] button, press the [MUTE] button.

STEP4 Press and hold the [MUTE] button on the other remote until the UR3L-SR4 Device LED light blinks twice.

***Note:** The LED will blink 5 times if there was an error in the learning process. In so, repeat STEPS 3 and 4. Continue learning other buttons by repeating STEPS 3 and 4.

STEP5 Once you have completed teaching UR3L-SR4 all desired commands for that Device, save the learned commands by pressing the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times. Now test all the buttons to make sure they learned correctly.

H. Erasing a Single Learned Command

STEP1 Press the [Device] and [INPUT] buttons simultaneously for 3 seconds until the Device LED light turns on.

STEP2 Press and hold the button you

The device LED will blink twice to confirm that the code has been stored.

want to erase for 3 seconds. The Device LED will blink twice to confirm the erasure.

STEP3 To exit, press and hold both the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times.

I. Erasing All Learned Commands from One Device

STEP1 Press the [DEVICE] and [INPUT] buttons simultaneously for 3 seconds until the Device LED light turns on.

STEP2 Press and hold both the [DEVICE] button you want to erase and the [PAUSE] button for 5 seconds. The Device LED will blink twice to confirm the erasure.

STEP3 To exit, press and hold both the [DEVICE] and [INPUT] buttons simultaneously until the Device LED blinks 3 times.

J. Programming the All Off Button

This allows you to program the All Off button so it can send up to three power On/Off commands with one button press.

STEP1 Press the [CBL] button.

STEP2 Press the [All Off] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Press the first [Device] button you want to store in the [All Off] button and then the [POWER] button. Repeat this for other Device until you have stored all the desired power commands into the [All Off] button.

STEP4 Press the [CH▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the Device have been saved.

K. Programming for Advanced Functions.

If your remote model has custom-programmable Macro buttons available, they can be programmed to act as a 'Macro' or Favorite Channel button in CABLE mode. This allows you to program up to five 2-digit channels, four 3-digit channels or three 4-digit channels that can be accessed With one button press.

***Note:** The FAV button is not programmable if you have a Digital Cable Box made by Pace, Pioneer or CISCO/SA.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Enter the the 2, 3 or 4-digit code for the channel you want programmed first (for example, 007) using the Number Pad, then press the [STOP] button. Then enter the code for the next channel (for example, 050), then press the [STOP] button. Repeat this process for the third channel. The [CBL] button will blink once for each channel entered.

STEP4 Press the [CH▲] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

To erase the Macro programming and return to the original function:

STEP1 Press the [CBL] button to

select the CABLE mode.

STEP2 Press a [MACRO] button and the [OK/SEL] button simultaneously for 3 seconds. The CBL device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP3 Press the [CH▲] button to erase the functions stored in the button. The CBL device LED will blink twice to confirm that the memory button has been erased.

L. Programming Volume Control

Volume and Mute control are factory-programmed to automatically transfer to the respective Device mode you select, as follows:

CBL:TV TV:TV DVD:TV

If you wish to store the Cable volume control in CBL mode, use the following steps.

STEP1 Press the [OK/SEL] button and [CBL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [VOL▲] button. The device LED will blink.

STEP3 Press [CBL] button. The device LED will blink twice to confirm the programming.

Note: To return CBL device to TV volume repeat steps above replacing [CBL] with [TV] in Step 3.

M. Programming Channel Control

Channel controls are factory-programmed to automatically transfer to the respective Device mode you select, as follows:

