


Operating Instructions For 4 in 1 Cable Remote Control

UR4-EXP

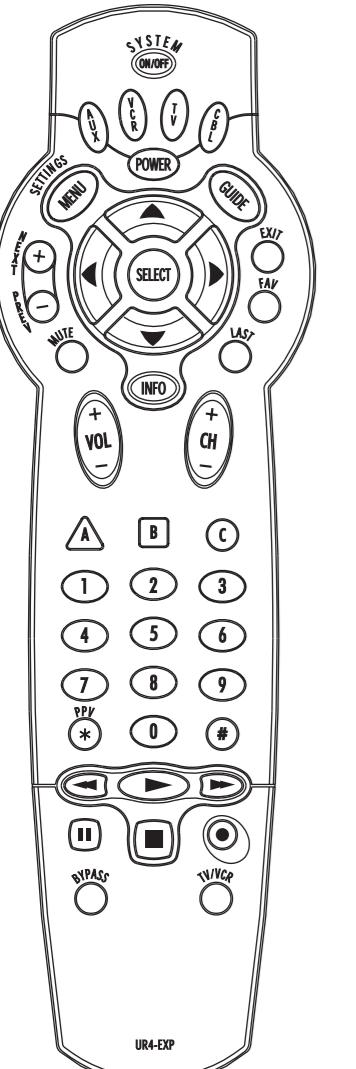

1 Introduction

The remote control is designed to operate the Scientific-Atlanta Explorer series and The Pioneer Voyager set top boxes. You can also control the majority of TV, VCR/DVD and AUDIO equipment on the market as shown below.

CABLE : Cable Converters

TV : Televisions

VCR : VCRs and DVD

AUX : Audio Receivers, DMX, DCR, TIVO, etc.


2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

STEP1 Remove the battery compartment cover on the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

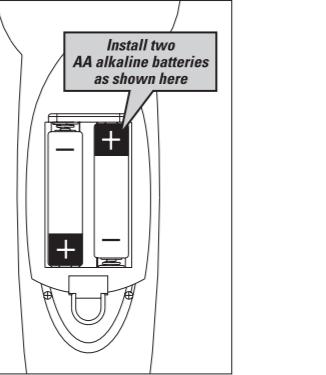

4 Operations

Default State:

Device Default: CABLE


Channel Default: CABLE channel and number keys through the CABLE, with the option of controlling channel and number keys through the TV or VCR. Refer to section F for programming the channel and number keys through your TV or VCR.

Volume Default: TV volume and mute through the TV, with the option of controlling volume and mute through the Cable box or Audio. Refer to section G for programming the volume and mute through your Cable box or Audio.

System On/Off button:

This button is designed to send out power commands for two, three or all four devices with one button press. Please refer to section E for details.

3 Button Functions

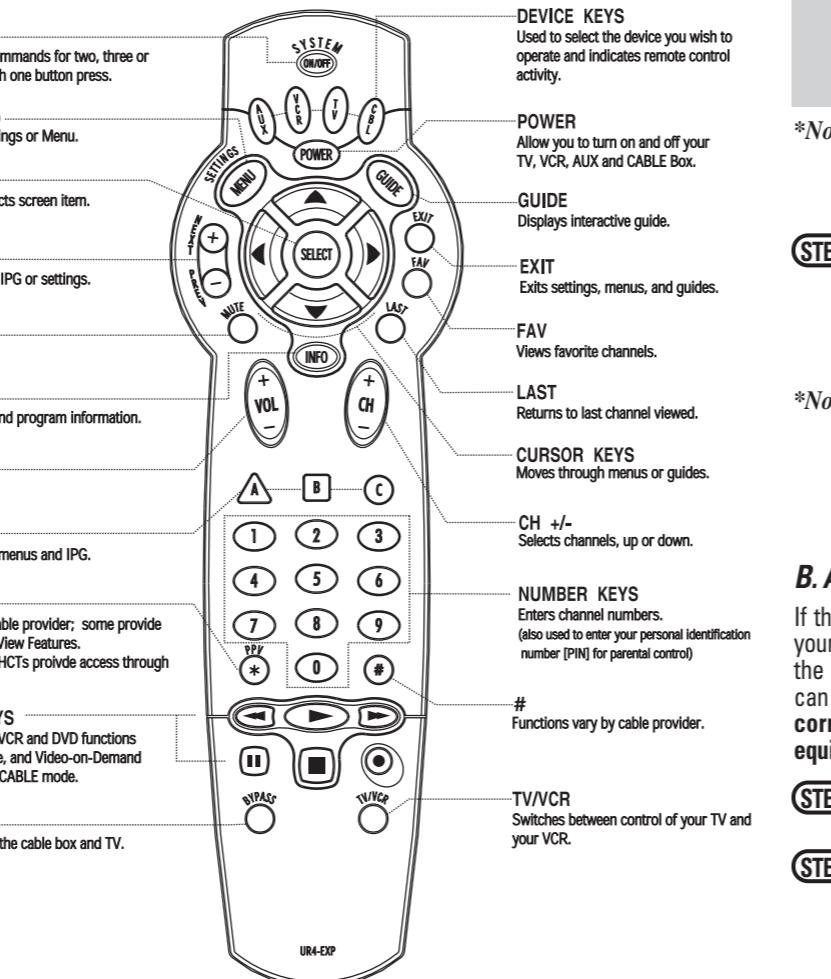

5 Programming the Remote Control

A. Three-Digit Code Programming Method.

The remote control can be programmed by pressing in a three-digit code number that corresponds to particular manufacturers and brands of Audio/Video equipment. The three-digit code numbers are listed in the code table of the instruction manual.

STEP1 Turn on the equipment you wish to program. (TV, VCR, DVD or AUX)

STEP2 Press the [DEVICE] button (TV, VCR or AUX) to be programmed and [SELECT] button simultaneously for 3 seconds. The device LED will turn on indicating the unit is ready to be programmed.

***Tip:** The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables.

***Tip:** The equipment will turn off when the correct three-digit code number has been entered. You can verify you have selected the correct code by pressing the [POWER] button, the equipment should turn on or turn off.

***Note :** If there is more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

STEP4 Store the three-digit code number by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

***Note :** Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three-digit code number from the same brand list.

***Note :** Ten blinks is equal to the number 0.

B. Auto Search Method.

If the three-digit code numbers assigned to your brand do not turn off your equipment or the code tables do not list your brand, you can use the **Auto Search Method** to find the correct three-digit code number for your equipment by the following steps:

STEP1 Turn on the equipment you wish to operate.

STEP2 Press the [DEVICE] button (TV, VCR or AUX) to be programmed and the [SELECT] button simultaneously for 3 seconds. The device LED will turn on.

***Tip:** The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your TV brand from the code tables.

***Tip:** The device LED will turn on for 20 seconds. The next step must be entered while LED is on.

STEP4 Store the three-digit code number by pressing the [AUX] button once again. The device LED will blink twice to confirm that the code has been stored.

***Tip:** You can verify that you selected the correct code by pressing the [POWER] button again. The equipment should either turn on or off.

STEP4 Press the same [DEVICE] button to store the code. The device LED will blink twice to confirm that the code has been stored.

C. To Find the Three Digit Code Number That was Stored in the Device.

STEP1 Press the [DEVICE] button (TV, VCR or AUX) you wish to verify and the [SELECT] button simultaneously for 3 seconds. The device LED will turn on.

***Tip:** The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

STEP2 Press the [CH+] button to save the power commands you stored. The [CBL] button will blink twice to confirm the saving.

STEP3 Press the [INFO] button.

The device LED will blink number of times indicating the number of each digit of the code number. Each digit is separated by a 1 second interval of the LED being turned off.

Example : One blink, three blinks and eight blinks with an interval of 1 second of LED being turned off, indicates the code number 138.

***Note :** Ten blinks is equal to the number 0.

D. Programming a second TV to AUX Mode.

STEP1 Press the [AUX] button to be programmed and the [SELECT] button simultaneously for 3 seconds. The [AUX] device LED will turn on.

***Tip:** The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

STEP2 Press the [TV] device button to pick up the TV code table.

STEP3 Press the [TV] button.

STEP4 Point the remote control toward the equipment and alternately press the [CH+] (or [CH-]) button and the [POWER] button. If the right code number is sent, the equipment will turn off.

***Tip:** This is designed to program the System On/Off button so that it can send out up to four power on/off commands with one button press.

STEP1 Press the [CBL] button.

STEP2 Press the [SYSTEM] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on for 20 seconds.

STEP3 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on.

STEP4 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on.

STEP5 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on.

STEP6 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on.

STEP7 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on.

STEP8 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on.

E. Programming Volume Control.

F. Programming Channel Control.

G. Programming Volume Control.

H. Programming For Advanced Function.

I. Low Battery Warning.

J. Memory Lock System.

K. Write your device Set-up codes.

L. Troubleshooting.

M. Specifications.

N. Technical Support.

Universal Remote Control, Inc.

www.universalremote.com

OCE-0005A Rev 06 (08/04/04)

STEP1 Press the [CBL] button and the [SELECT] button simultaneously for 3 seconds.

***Tip:** The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

STEP2 Press the [VOL+] button.

STEP3 Press the [CBL] button. The device LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the TV volume control in CBL mode, repeat the above steps by pressing [TV] in **STEP3**.

H. Programming For Advanced Function.

In the CBL mode, the A, B and C buttons can be programmed to act as a macro or favorite channel button to send out up to 10 commands with one button press.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [A, B, or C] button and [SELECT] button simultaneously for 3 seconds. The [CBL] device LED will turn on for 20 seconds.

***Tip:** Press up to 10 buttons you wish to store. The [CBL] device LED will blink once for each command entered.

STEP3 Press the [VOL -] button.

STEP4 Press the [CH+] button to store the functions that were selected. The [CBL] device LED will blink twice to confirm the storage of functions.

I. Low Battery Warning.

When the batteries are low and need to be replaced with fresh batteries, the remote control LED will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

J. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

K. Write your device Set-up codes.

TV Set-up Code Number:

VCR Set-up Code Number:

AUX Set-up Code Number:

6 Set-up Code Tables

CABLE TV

MAKER(BRAND) NAME	Converter	Code No
UR4-EXP	Scientific-Atlanta Explorer series, Pioneer Voyager, Pace 510 and 550	002

TV

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	072 081 160 161 096
ADVENT	247
AIKO	103
AKAI	006 146 248
ALARON	028
AMARK	112 143
AMERICA ACTION	043
AMPRO	073
ANAM	043 054 055 056 080 112
AOC	058 006 004 112
APEX DIGITAL	015 226
AUDIOVOX	076 103 043
BAYSONIC	043
BELL&HOWELL	072
BRADFORD	043
BROKSONIC	096
CANDLE	006 002 003 004
CAPEHART	058
CARVER	164
CELEBRITY	001
CETRONIC	043
CINERAL	103 120
CITIZEN	006 002 003 004 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 051
CORONADO	143
CRAIG	043 054 028
CROSLEY	164
CROWN	043 143
CURTIS MATHEWS	006 004 101 143 011 072 081 120 164
CXC	043
DAEWOO	076 103 055 004 127 143 016 043 044
	125 120
DAYTRON	004 143
DENON	011
DUMONT	004 073
DWIN	161
DYNASTY	043
DYNATECH	062
ELECTROBAND	001
ELECTROHOME	024 076 143
EMERSON	005 028 043 048 076 096 155 004 051
	143 151 153 154
FISHER	007 057
FUJITSU	164 028 198 246
FUNAI	028 043 052 249
FUTURETECH	043
GATEWAY	242
GE	006 073 144 160 161 004 008 009 034
	056 074 091 155 081 120
GIBRALTER	004 073
GOLDSTAR	004 106 119 110 112 113 127 143
GRUNPY	028 043

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
HALL MARK	004
HARLEY DAVIDSON	028
HARMAN KARDON	164
HARVARD	043
HITACHI	163 004 007 009 011 072 010 012 023 075
	143 158
INFINITY	164
INKEL	129
INTEQ	073
JBL	164
JCB	001
JCPENNEY	004 006 008 024 030 065 101 143 156 160
JENSEN	013
JVC	038 001 034 083 206
KENWOOD	006 001
KLOSS	002 059
KTV	006 043 143 154
LG	004 106 119 110 112 113 127 143
LODGENET	072
LOEWE	207 164
LOGIK	072
LUXMAN	004
LXI	007 015 052 081 160 164
MAGNAVOX	006 003 004 022 059 060 061 063 064 127
	164 094 160 028
MAJESTIC	072
MARANTZ	164 006
SUPRE MACY	002
SUPREME	001
SYLVANIA	006 003 059 060 063 064 127 160 164 044
	249
SYMPHONIC	052 249
TANDY	081
TATUNG	056 062
TECHNICS	034 080
TECHNOL ACE	028
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143 103
	164
TELERENT	072
TERA	172
TMK	004
TNCI	073
TOSHIBA	015 030 007 040 062 101
TOTEVISION	143
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDIKRON	174 188 164
VIDTECH	004
WARD'S	004 064 164 008 009 019 028 060 061 063
	072 074 143
WESTING HOUSE	076
YAMAHA	004 006
YORK	004
YUPITERU	043
ZENITH	072 073 095 103 011 096
ZONDA	112

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
RCA	160 161 144 156 065 006 004 023 024 056
	074 152 081
REALISTIC	007 019
RUNCO	072 073
SAMPO	006 004 058 242
SAMSUNG	004 101 127 133 143 160 089 105 211 228
	229
SANSEI	120
SANSUI	096
SANYO	007 053 057 082 020
SCOTCH	004
SCOTT	004 005 028 043 048 143
SEARS	004 007 015 028 030 057 082 094 143 160
	052 164
SEMIVOX	043
SEMP	015
SHARP	081 014 019 028 004 022 143 175
SIGNATURE	072
SONY	001 126 139
SOUNDESIGN	003 004 028 043
SPECTRICON	112
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUPRE MACY	002
SUPREME	001
SYLVANIA	006 003 059 060 063 064 127 160 164 044
	249
SYMPHONIC	052 249
TANDY	081
TATUNG	056 062
TECHNICS	034 080
TECHNOL ACE	028
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143 103
	164
TELERENT	072
TERA	172
TMK	004
TNCI	073
TOSHIBA	015 030 007 040 062 101
TOTEVISION	143
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDIKRON	174 188 164
VIDTECH	004
WARD'S	004 064 164 008 009 019 028 060 061 063
	072 074 143
WESTING HOUSE	076
YAMAHA	004 006
YORK	004
YUPITERU	043
ZENITH	072 073 095 103 011 096
ZONDA	112

VCR & TV/VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
AKAI	043 046 124 146
AMERICA ACTION	117
AMERICAN HIGH	031
AMPRO	072
ANAM	031 103
ASHA	040
AUDIO DYNAMICS	012 023 043
MGA	045 046 059
MGN TECHNOLOGY	040
MINOLTA	004
MITSUBISHI	059 061 051 004 046 045 053
MOTOROLA	031 053
MTC	034 040
MULTITECH	024 034
CALIX	101
CANON	028 031
CAPEHART	108
CCE	024 117
CINERAL	117
CITIZEN	101 117
COLT	024
CRAIG	003 040 135 024 101
CURTIS MATHEWS	031 041
PANASONIC	031 070 133 140 163
CYBERNEX	040
DAEWOO	005 108 111 117 017 065 007 010
DAYTRON	108
DBX	012 023 043
DYNATECH	034 053
ELECTROHOME	059 101
ELECTROPHONIC	101
EMERSON	006 029 035 037 129 153 017 025 027 031
	034 036 046 101 131 138 117
FISHER	003 010 008 009
FUJI	031
FUNAI	034
GARRARD	034
GE	031 072 144 147 063 107 109 040 053
GO VIDEO	132 155 040 136
GOLDSTAR	101 004 012
HARLEY DAVIDSON	034
HARMAN KARDON	012 045
HARWOOD	024
HITACHI	004 026 034 043 063 137 150
HQ	034
HUGHES	004
INSTANTREPLAY	031
JCL	031
JCPENNEY	004 012 031 040 101
JENSEN	043
JVC	048 043 055 060 130 150 152 012 031
KEC	101 117
KENWOOD	034 150 014 048
KLH	024
KODAK	031 101
LG	101 004 012
LLOYD	034
LOGIK	024
LXI	003 009 017 034 101 004
MAGIN	040
MAGNASONIC	117
MAGNAVOX	067 031 034 068 041 156 170
MARANTZ	067 069 012 031
MARTA	101
MATSUI	027 030
MATSUSHITA	031

VCR & TV/VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
MEI	031
MEMOREX	040 101 003 014 031 034 053 072 134 139
	025
MGA	045 046 059
MGN TECHNOLOGY	040