Cisco Digital Transport Adapter HDA-IR2 Remote Control

Welcome

The Cisco Digital Transport Adapter (DTA) remote controls your Cisco DTA and the volume and power on many connected TVs. Use the instructions in this guide to set up and use your Cisco DTA remote.

Important Information About Your Remote

The remote control is initially programmed for DTA only. If for your TV, you must program the device as well. Please see Program the Remote to Control Your TV to learn how to enter TV codes and program your remote control.

Batteries

Use two AAA batteries. Check the diagram inside the battery compartment to ensure the batteries inserted in the correct direction.

Note: Batteries must be replaced within two minutes of removal to retain programmed TV code.

⚠ Caution: This remote should be kept out of reach of the children under the age of 6.

Program the Remote to Control Your TV

Program the remote control for TV following these steps:

1. Turn on your TV.
2. Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on, then release both keys.
3. Find four-digit device code for your TV brand. Press and release the four numeric keys.
4. If the device code is valid, the LED turns off and the device code will be retained. If the device code is invalid, the LED will blink two times and then remain on. The remote will stay in set up mode. You can go back to step three to enter another code if necessary

Automatic Code Search

If the device code for your TV brand can't be found in the list, please try to search the device code following these steps:

1. Turn on TV device manually.
2. Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on, then release both keys.
3. Press the "TV POWER" key on your remote to enter automatic code search mode. The remote will transmit the TV power code every 1.5 seconds and the LED will blink at the same time. When you see the TV device is powered off, the remote has found a valid group device code.
4. Press the "PROG" key to store the code and to exit the search mode.

Volume Control

Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on, release keys then either:
1. Press the "VOL-" key to assign the VOL+, VOL-, and MUTE keys to control DTA.
2. Press the "VOL+" key to assign the VOL+, VOL-, and MUTE keys to control TV. Default state: the VOL+, VOL-, and MUTE keys are assigned to control DTA.

Trouble Shooting

If there is no response when you press any key on the remote, please check the following items before calling for service.

Check the Batteries

Are the batteries inserted correctly? Are the batteries drained? You may need to replace the batteries with new ones.

Check the DTA

Is the DTA connected to the input of the TV? Is the DTA connected to the cable wall outlet? Is the DTA power cord connected to the power outlet?

Check the TV

Is the TV power cord connected to the power outlet? Is the TV tuned to the correct channel to work with the DTA?

Check the TV Code List

Is your TV's brand included in the code list? Sometimes there is more than one code for a TV's brand, please try to use different codes.
If you can't find your TV's brand in the list or you can't program your remote manually, you should perform the following steps:
-Run Auto Search Mode.
-Use the original remote control that is provided with the TV.

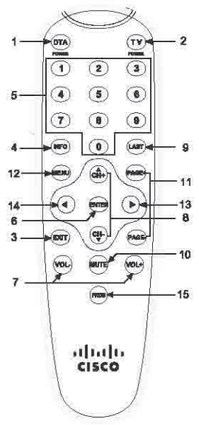

The Keys Including:
1.DTA Power
2.TV Power
3.Exit
4.Info
5.0-9 Digits
6.Enter
7.Volume +/-
8.Channel +/-
9.Last
10.Mute
11.Page+/-
12.Menu
13.Right Arrow
14.Left Arrow
15.PROG

TV Brand and Code List

888	0471 0701
A. R. Systems	0061 0601 2881
	0661 0751
Accent	0021 0061 2881
Acer	2961 3281
Acoustic arch	2911
Acura	0021
Adcom	1061
Addison	1181 0201
ADL	2181
Admiral	0171 0231 1191
	0821 0471
Advent	1901
Adyson	0081 2051
AEA	0061 2881
AEG	2501 1031 1951
Agashi	2051 0471 0081
AGB	1611
Aiko	0021 0061 2881
	2051 0641 0041
	0711 0121 0311
	0291 0471 0081
Aim	0061 0121 0701
	2881 1521 0341
	1651 1701 1301
Airis	3221
Aiwa	0981 2341 2581
	2401 0021 0311
	0341 2881 0061
Akai	0641 2741 2431
	0711 1481
	0291 0041 0351
	1241 2641 0121
	1521 0231 0701
	1421 1351 1611
	1341 0991 0911
	0771 3121 0081
	1091 2051 0471
	0281 0651 1031
	2001 2581 0761
	1151 2421 2271
	2601
Akashi	2151 0021
Akiba	0351 0481 0751
	0061 2881
Akira	0821
Akito	0061 2881
Akura	0061 0351 0471
	2881 1271 0701
	0021 0481 1351
	2621
Alaron	2051
Alba	0021 0061 2001
	2881 0051 1351
	0351 0821 1371
	0641 1271 0621
	2051 0431 0231
	0811 2581 0731
	2601
Alfide	1241
Alkor	0041
All-Tel	1881
Allorgen	0081
Allstar	0061 2881
Ambassador	0271
Amplivision	0081 1371 0531
Amstrad	0021 0271 0061
	1611 0471 0671
	0641 0351 0701
	0711 2881 2001
	1151 2621
Anam	0061 2881 0021
	1161 1871
Anam National	0061 2881 1161
Anderson	1951 2041
Anglo	0021 0471
Anitech	0021 0471 0061
	2881 0481 0191
Ansonic	1371 0061 2881
	0021 1271 0661
	0231 0191 0891
	0461 0431 2381
	1621
AOC	0021 0101 0171
	0201 0281
Aolingpike	0471 0701
Apollo	0761
Arc en Ciel	0211
Arcam	2051 0081
Ardem	1221 1351 0061
	1101 2881
Aristona	2881 0061
Arthur Martin	0231
ASA	1621 0181 0581
	0111
Asambal	2721
Asberg	0061 2881 0191
Asora	0021
Astra	0061 2881
Atuka	0351 0081 2051
	0471 0481
ATD	1301
Atlantic	0061 2881 2051
	0531 0461
Atori	0021
Auchan	0231
Audiosonic	0021 0061 0661
	1721 0211 2881
	1351 1341 0081
	1371 0561 0471
Audioton	0351 1221 2191
	0081 1221 1371
Audioworld	0471
Aumark	1301
Autovox	0101
AVP	0081 0431
AWA	2581
	0021 0031 0051
	0661 0701 0061
	2881 2051 1031
	0081
Axxent	0201 0471 3021
Axxon	0021
B&D	1351
Baier	2181
Bellbe	1901
Belle	0021 0471 0701
	0001 0021 0661
Baird	1211
	0211 2651 0301
	0121 0131 0081
	0341 2091
Bang & Olufsen	0951
BaoHuaShi	0471 0701
Baosheng	0021
Barco	0231
Basic Line	0021 0661 0061
	0351 0231 1271
	2881 0481 0081
	0751 0571 2001
Bastide	0081
Bauer	1701 0021
Baur	0021 0061 0311
	0791 0881 0011
	2881 0291 2401
Bazin	0081
Beaumark	0281
Beijing	0001 0021 0341
	0371 0471 0661
	0701 0801 1211
	1741
Beko	1371 1351 0041
	1221 1341 0061
	0821 2001 2881
	1031 1821
Belson	2071 2711
Bennett	2881 0061
BenQ	2511
Beon	0061 2881 0821
Berthen	1271
Best	0561 1371
Bestar	0061 2881 1371
	0661
Bestar-Daewoo	0661
Binatone	0081
Black Diamond	1001 1721 2001
	2881 1741 1521
Black Panther	1951
Black Star	0191
Black Strip	0431
Blackway	0041
Blaupunkt	0481 0351
	0011 0291 0881
	0551 0401 0331
	0751 0261 0051
Blue Sky	0061 0351 2881
	1271 1351 2001
	0811 1341 2411
	0481 0751 2581
	2071 1821 2971
Blue Star	0481
Bondstec	0431
Boots	0081 0021
Bosch	0531 0401
BPL	0061 0481 3111
	2881 2721 2841
	0341 2551 2811
	2691 2791 3131
	3391 3251 3101
Brandt	0211 1061 0441
	0491 2651 0961
	2981
Brandt Electrique	0491 0441
Brinkmann	0061 2881 1271
	2661 0821 1221
Brionvega	0061 0671 2881
Britannia	2051 0081
Brother	0471
Bruns	1221
BSR	0231 0311
BTC	0351
Bush	0021 1001 0051
	2001 0061 1201
	3231 0351 1351
	0481 1271 0621
	0231 0641 0661
	2661 1301 1191
	0471 0311 0811
	0341 0081 2501
	2881 2521 2581
	1591 2421 2271
	2341 3401
Caihong	0021
Caishi	1971
Canton	0351
Caposonic	0471
Carad	1011 0061 2881
	1271 2001
Carena	0751 0061 2881
Carrefour	0051 0111 0061
	2881
Carver	0261
Cascade	0021 0061 2881
Casio	0061 2881 0231
Cathay	0061 2881
CCB	0061 0081 2881
	2641
CE	2721
Celestial	1711 1721 1741
	2681
Centrex	1631 1971
Centrum	2001
Centurion	0061 2883
Century	0431
CGE	0141 0251 0431
	0821 1371 0231
Changcheng	0001 0021 0471
	0661 0701 1211
Changfei	0021 2641 0661
Changfeng	0471 0701 1521
Changhai	0021 2641
Changhong	2681 1721 0021
	0471 0871 1741
Chengdu	0021
Ching Tai	0021
Chun Yun	0021
Chunfeng	0021 0471
Chung Hsin	0201 0051
ChungFeng	0701
Chunsun	0021
Cimline	0021 0351
Cinema	1241
Cinex	1151 2501
Citizen	0101
City	0021
Clarivox	0061 0821 2881
	0111 0191
Clatronic	0061 0431 1371
	0641 1351 0351
	0471 2881 0081
	0021 0191 0531
	1151 1031 1951
Clayton	2001
CMS	2051
CMS hightec	0081
Cobalt	1971
Combitech	2581
Concorde	0021
Condor	0531 0061 1371
	2881 2051 0021
	0481 0191 0431
	0821 0891 0231
	0471
Conia	1531 1741 2711
	1721
Conrac	1821
Conrad	0061 2881
Conrows	0021 0471 0701
	1301 1521 2031
Contec	0021 2051 0051
	0031 0471 0061
	2881
Continental Edison	0211 0491 0811
Cosmel	0021 0561 0061
	2881
Crosley	0141 0431 0251
	0231
Crown	0021 1331 0061
	1371 1221 2881
	0821 0811 1351
	1031 1241 1341
	0341 1181 0571
	2001
Crown Mustang	1241
CS Electronics	2051 0351 0431
CTC	0431
CTX	2511
Curtis Mathes	0101 0171 0241
Cybertron	0351
Cytronix	2321
D-Vision	0061 2621 2881
Daewoo	1111 1211 0661
	2411 0861 0061
	2881 0021 2051
	0351 0081 1891
	0281 0261 2531
	2581 1931 0201
	2931 3361 1901
	1881 1241
Daimichi	0351 2051
Daitsu	2891
Danichi	0351
Dansai	0061 2881 0471
	0041 2051 0021
Dansette	0051 0081 0341
Dantax	0701
	1371 1221 1351
	1031 1341 2581
Datsura	0341
Dawa	0021 0061 2881
Daytek	1301 2101 1651
	3021 1241 3011
Dayton	0021 2101 3011
Daytron	0021 0661 0061
	2881
Dayu	0661 1211
de Graaf	0341 0071 0911
	0231 1191
DEC	1661 2151 1971
Decca	0061 0121 1611
	2881 0081 1891
	1051 2581
Deitron	0061 2881 0661
	0351
Dell	2281
Denko	0471
Denver	0061 2881 1031
	2061 1281
DER	0301
Desmet	0531 0061 2881 0021
Diamant	0061 2881
Diamond	0471 1301 0021
	1731 2051 0641
	2151 1721
Digatron	0061 2881
Digihome	2041
Digiline	0061 2881 0181
	1271
DigiLogic	0061 2881
Digitex	1721
Digitor	0061 2881 1941
	1871
Digivision	0311
DigiX	1931
DiK	0061 2881
Diri	0021 0061 2881
	0431 0081
DL	1971 1631 0061
	1281 1881
DMTECH	3411 2951
Domeos	1271
Domland	0691
Dongda	0021
Donghai	0021
Dream Vision	2481
DSE	1941 1871 2501
	1721
DTS	0021
Dual	2661 0081 2651
	0061 2881 0461
	0601 0691 0231
	1891 1091 2041
	2001
Dual Tec	0081
Dumont	0111 1621 0191
	0081 0121
Dunai	0231
Durabrand	0061 0281 2381
	2881
Dux	0061 2881
DVX	1971
Dynatron	0061 2881
emax	1031
Easy Living	2271 2421
Ecco	1581 1651
ECE	0061 2881
Edison-Minerva	0811
Elbe	0461 0721 0671
	1371 0231 0061
	2881 0351 0291
	0891 1011 0081
	1611 0311 2251
Elbe-Sharp	1611
Elcit	0431 1611 0191
	0231
Elekta	0021 0061 2881
	0471 0481
Elfunk	2121 2001
ELG	0061 2881
Elin	0061 2051 0911
	2881 0181 1621
	0311 0231 0021
Elitc	0351 0061 0531 2881
	2881
Elman	0191
Elta	0021 0471 2051
Emco	0431
Emerson	0271 0281 1351
	0431 0061 2881
	0641 0111 0481
	0531 0311 2411
	1221 1371 0231
	0541 1271
Emperor	0481
Enzer	1521
Erae	2991
Eres	0061 2881
ESC	0061 2881 0081
Estôle	0231
Ether	0021
Etron	0001 0021 0061
	2881 0231 1721
Eurofzel	0471 0081
EuroLine	0061
Euroman	2051 0471 0061
	2881 0081 1371
Europa	0061 2881
Europhon	0061 1611 0191
	0231 0081 2881
	0431 2051
Evesham	2271 2421
Excel	0061 2881
Expert	0461 0231
Exquisit	0061 2881 0431
Fagor	0061 2881
FairTec	2071
Family Life	0061 2881
Feilang	0021
Feilu	0021
Feiyan	0471 0701
Feiyue	0021
Fenner	0661 0021
Ferguson	0061 0131 0211
	1061 0491 0441
	2651 0961 0301
	2881 0041 1181
	1621 0201 0311
	0911 0731 2001
	3211 2341 2581
	0231 2051 0791
	0311 1191 0061
	2881 0641 0701
	0301 0471 2581
Fidelity	0081
	0341 0581 0911
	0311 0231 1191
	0121 0491 2651
	0091
Finlux	0061 0181 0111
	1621 0121 2881
	1351 0581 0891
	1611 0081 0231
	1341 0191 1091
	0841 0771 2501
	0761 0821 1031
	1051 1821
Firstar	0021
Firstline	0021 0061 2051
	2881 0081 0661
	0431 1271 0541
	1351 0231 2411
	0191 0891 0121
	0341 0311 2001
	2071 1821 2971
	1951 2991
Fisher	1621 0081 0051
	0341 1371 0941
	0091 0311 0231
	0121 0121
Flatdisplays	2701
Flint	0061 0751 2881
	1011 0121 0351
	0471
FNR	0191
Fonda	2831
Force	2041
Forgestone	0301
Formenti	0061 0231 0531
	2881 1221 2051
Formenti-Phoenix	2051 0531
Fortress	0171
Fraba	0061 2881 1371
Frisc	0021 0061 2881
	0191 1371 0861
	1171 1011
Frontech	0231 0431 0471
	1191 0081 0021
Fujimaro	1881
Fujitsu	1261 0121 0191
	1861 0081 0231
	0021 0601 0061
	2881 0311 0461
Fujitsu General	0021 0081 0231
Fujitsu Siemens	2321 2421 2271
	3001 1951 1821
Funai	1271 0471 0701
Furi	0471 0701
Furichi	2151
Futronic	0471 1661 2151
Future	0061 2881
G-Luxon	3221
Galaxi	0191 0061 2881
	0311 0231
Galaxis	1371 0821 0061
	0191 2881
Galeria	0021
Gateway	2511
GBC	0231 0021 0661
	0351 1191
GE	2651 0281 0481
	0961 0491 0211
	0441 1061
Geant Casino	0231
GBC	0061 0231 0311
	0121 0081 1611
	2881
Geloso	0021 0431 1191
	0231 0661
General	0211 0491
General Electric	2651 0491
General Tchnic	0021
Genesis	0021 0061 2881
Genexxa	0231 0351 0061
	2881 0701 0021
Gericom	1881 2321 2771
	2181 1931
Gevalt	2991
Giant	0081
Gintai	1391
Goldfunk	1271
Goldhand	2051
Goldline	0561
GoldStar	0001 0061 0021
	0281 1371 0651
	0081 0431 2881
	2051 0231 0311
	0211 1191 1031
	0071 1351 1341
	0751
Gooding	0811
Goodmans	1111 2421 0051
	2001 2271 0061
	0121 0861 0081
	2881 1351 2651
	1271 0641 2411
	0661 0471 1611
	0021 0811 0041
	0771 0961 0441
	0351 2581 2251
	1211 2521 1931
	2191 1281 3021
Gorenje	1371
GPM	0351
Gradiente	1181 0261 2731
	0061 2881
Graetz	0231 1351 0311
	0641 0061 0571
	2881 1951
Gran Prix	1151
Granada	0061 0091 0121
	2881 0341 0371
	0081 0571 1611
	0201 0051 0761
	0441 0961 0231
	1191 0361 2651
	0911
Grandin	0061 0481 2881
	0021 0231 1011
	1351 1341 1271
	0661 0531 0351
	0751 2001 1881
	2071 1931 3011
	3031
Gronic	0191 0081 0231
Grundig	0011 0021 0051
	0061 0111 0281
	0291 0721 0731
	0811 0871 0881
	2881 1021 1241
	1281 1371 1471
	1651 2191 2201
	2251 2341 2581
	2601 2651 2991
	3021 3441
Grunkel	1951
H&B	1821
Haaz	1651
Haier	1301 0471 1601
Haihong	0021
Haiyan	0471 0701
Halifax	0471 2051 0081
Hallmark	0281
Hammerstein	0471 0101
Hampton	2051 0081
Hanimex	0351 2581
Hankook	0281
Hanseatic	0061 0531 2881
	0311 0861 2661
	0231 1211 0481
	0691 1111 1371
	0021 0081 0651
	1351 1821 1221
Hantarex	0021 1611 0061
	2881 0191 2951
	3141
Hantor	0061 2881
Harsper	1881
Harwa	1581 2091 2301
Harwood	0021 0701 0061
	2881 0811
Hauppauge	0061 2881
Havermy	0171
HCM	0021 0481 0701
	0061 2881 0081
	0351 0821 0471
Hedzon	2881 0061
Hema	0081 0021
Hicon	3191
Hifivox	0211
Higashi	2051
Highline	0471 0061 2881
Hikona	0351
Himitzu	1601
Hinari	0021 0341 0051
	0061 2881 0351
	0231 0621 0731
	0811 0471 2581
Hisawa	0481 0351 0751
	1011 2581 1351
HiSense	2971 0341 0021
	0871 1521 1741
	2031 2121 1631
	2881 3121
Hitachi	0361 2211 0021
	0971 0051 0071
	0201 0761 0231
	2651 0081 0211
	0321 0281 1611
	0121 0781 0861
	0061 0871 2881
	0911 1191 1381
	1111 1491 2001
	1891 2031 0181
	0841 2391 0311
	0791 0771 1991
	2451 2041 1911
Hitachi Fujian	0201 0361
Hitsn	0021 1011 0751
	0351
HMV	0301
Hoer	1351 2501 1881
	1951
Home Electronics	1031
Hongmei	0021 0171 0471
Hongyan	0471 0701
Hornyphon	0061 2881
Hoshai	0351 0751 0481
Hua Tun	0021
Huafa	0021
Huanghaimei	0021
Huanghe	0021
Huanglong	0021
Huangshan	0021 0471 0701
Huanyu	2051 0661 0471
Huaqiang	0471 0701
Huari	0471 0701
Hugoson	1961 2181
Hygashi	0081 2051
Hyper	0021 2051 0081
	0431
Hypersonic	0311
Hyperon	0061 0471 2881
	0481 1351 1341
	0081 0751 2581
	2001 1271 1221
Hyundai	0061 1881 3201
	2881 1651 2151
	1521 2751 2241
	1901 3361 2501
	3301 3311
Iberia	0061 2881
ICE	0081 0471 0061
	0641 0021 2881
	0351 2051
Ices	0351 2051
Iet	0061 1891 2881
Igo	2781
IISonic	3021
Iiyama	2181 1961
Imperial	0061 0141 0231
	0431 1371 0821
	0251 2881 2251
	0891 0311
Imperial Crown	0001 0021 0471
	0661 0701 1211
Indiana	0061 2881
InFocus	2021 2771
Ingelen	0231 0811 1011
	1351 0311
Ingersoll	0021
Inno Hit	0021 0121 1611
	0061 2881 0351
	0081 0431 0191
	0481 1951
Innova	0061
Innovation	2661 0061 2881
Innowert	1881 2321
inotech	1581 1721
Interactive	0061 2881 0791
	0401 0231 0311
	1371 0211 0891
Interbuy	0021 0061 0471
	0431 0791 2881
Interfunk	0061 0231 2881
	0431 0311 0791
	0401 1371 0211
	0551
Internal	0061 2881 0861
	0661 2411
International	2051
Intervision	0061 0481 0081
	0191 0751 0471
Irradio	0641 0651 2661
	1221 1371 0691
	0811 0351 0231
	0431 0021 2881
IRT	0021 0061 2881
Isukai	0351 0431 0641
	1301
ITC	0351 0061 2881
ITS	0481 0751
	0081 0531
	0061 0641 0351
	0481 0471 2051
ITT	0021 2881
	0231 0311 0771
	0911 0761 0301
	0581 0571 0341
ITT Nokia	1011
	0311 0911 0231
	0761 0771 0581
	0341 0571 1031
ITV	1011 1091 1191
	0471 0061 2881
	0431 0861
JDV	2621
Jean	0051 1391 0021
JEC	0041
Jialicai	0021 0471 0701
Jinfeng	0341 0371
Jinque	0021 0471 0701
Jinta	0021 0471 0701
Jinxing	0021 0471 1301
	1741
JMB	0061 0861 1111
	0661 2881 0731
	2581
JNC	3411 1901
Jocel	1331
Jubilee	2881
Juhua	0471 0701
JVC	0051 0171 0301
	0351 0641 0821
	0871 1031 1161
	1181 1261 1451
	2731 3481
Kaige	0021 0471 0701
Kaisui	0021 0351 2051
	0481 0061 0081
	2881 0751
Kambrook	0651
Kamp	2051
Kanghua	2551
Kangli	0001 0021 0471
	0661 1211
Kangyi	0021 0471 0701
Kapsch	0231 0311 0461
	1621
Karcher	0061 2881 1371
	1011 0231 0481
	0191 0471 1591
	1351 2501 1031
Kathrein	2881 0061
Kaws	0641
Kawasho	2051
KB Aristocrat	0231
Kendo	0061 1011 0671
	2881 0231 2661
	0791 1371 0651
	1191 0891 0191
	0431 1151 2001
	2381 1221
Kennedy	0231 0721
Kenrox	2001
Kenwood	0181
KEC	0081 2641
Kingsley	2051
Kiota	0001
Kioto	2881 1651
Kise	1681
Kiton	2881 0061 1271
KLL	0061
Kneissel	0061 0461 1371
	1011 0891 0661
	0861 2881 0721
	0671 2581
Kobra	3191
Kolin	0201 0051
Kolster	0061 2881 0191
	0431 0351
Kongque	0021 0471
Konichi	0021
Konka	0061 2881 0641
	1351 0821 0351
	1121 1281 1531
	1601 2711 1661
Kontakt	0811
Korpel	0061 2881
Korting	1371 0531
Kosmos	0061 2881
Kotron	0701 0471
Koyoda	0021
KTV	0081
Kuaile	0021 0471 0701
Kuba	0231
Kuba Electronic	0231
Kulun	0021
Kumlun	0341 0371 0471
	0661 1211
Kyoahu	0701 0821 0471
Kyoto	0231 2051 0081
L&S Electronic	1881 1351
LaSAT	1221 1371
Lavis	2001 0061 0231
Leader	0021
Lecson	0061 2881
Legend	0021 0561
Lemair	0891
Lenco	0061 1391 0021
	0231 0661 2881
	1621 1281 2001
Lenoir	0021
Lesa	0431
Levis Austria	0061 2881
Lexsor	2091
Leyco	0061 0471 0121
	2881
LG	0001 0021 0061
	0081 0101 0201
	0211 0231 0281
	0311 0431 0651
	2881 1031 1131
	1301 1341 1351
	1371 1761 1851
	2051 2071 2261
	2801 2851 2921
	3081 3471 3501
	3531 3591
Liesenk & Tier	0061 0401 2881
Liesenkotter	0061 0401 0331
	2881
Lifetec	0061 0021 2661
	0661 1271 0791
	1171 2001 1891
	2881 0351 0471
	1261 2271 2421
	1351
Lloyd's	0001 0021
Local Calcutta TV	3171 2831 2841
	2721
Local Chennai TV	0641 3171 0471
	0991 3261 2831
	3051 3091 0021
Local Delhi TV	2741 3231 3171
	3261 2831
Lodos	2001 2041
Loewe	0791 1101 1641
	0061 2881 1171
	1371 0671 1611
Logik	0001 0031 0101
	1301 1581 0021
	0301 0471 0641
	1931 2181 2001
Logix	1271 2661
Longjiang	0471 0701
Luker	2621
Luma	0061 1191 0231
	0891 2881 0661
	0021 0671 0461
Lumatron	1191 0061 2881
	0671 0231 0461
	0311 0081 0471
	0131
Lux May	0061 0021 2881
Luxor	0321 1951 0311
	1191 0771 0841
	0341 0911 0231
	0581 0761 2001
	0081 1091
LXI	0281
Madison	0061 2881
Magnadyne	0191 0431 1611
	0231
Magnafon	0191 1611 2051
	0131
Magnavox	0061 2881 0051
	1651 1631 1151
Magnum	1351 0061 2881
	1341 2311
Mandor	0471
Manseth	0061 0081 2881
	0471 0531 0041
	0231 1191
Manhattan	0061 1901 2881
	1271 2001 2891
	0231 1591
Marantz	0061 2881 0701
	3311
Mark	0061 2881 0081
	2051 0661 0021
	1351 1341
Master's	0861 0061
Masuda	0351 0641 0021
	0471 0061 0081
	2881
Matsui	0021 0061 0031
	2881 0041 0811
	0051 0121 0271
	0341 0621 0081
	0641 0731 0711
	1611 1191 0751
	0231 0091 0011
	0291 0441 1351
	2581 2001 2341
Matsushita	1161
Matsuvisma	1281
Maxam	0471
Maxdorf	1581
Maxim	2621 2501
MCE	0021
MEI	2721
Mediator	0061 2881
Medion	0061 1271 1351
	2001 1821 2661
	2881 0791 1891
	1301 2581 2381
	2521 2271 2421
	1931 2311 2341
Megas	1011
Megatron	0281
MEI	2001 0061 2881
Meile	0471 0701
Melectronic	0021 0581 0061
	0791 1621 0211
	2651 0231 0431
	0181 0081 0491
	0661 0771 0841
	2051 0891 2881
	1111 0311 0291
	0011 1211 1351 3401
	3401
Memorex	0021 0281 2001
	1161 0101
Memphis	0561 0121 0021
Mercury	0001 0061 0021
	1301 0471 2881
	2641
Merritt	0911 0311 0231
Metronic	1061
Metz	0681 0881 0741
	1511 0631 1951
	0011 0291 0061
	2881 1281 1271
	2001 3321
MGA	0281 0061 2881
	0351 1621
Micromaxx	0061 2881 1271
	2001 2251 1821
Microstar	1821
MicroTEK	1721
Milcomi	2041
Minato	0061 2881
Minerva	0111 0811 0881
	0011 0291 1611
	0201
Minoka	0701 0061 2881
Mirror	2521
Mistral Electronics	0301
Mitsubishi	0201 0171 0791
	0061 0281 0051
	0301 0881 2881
	0341 2001 2371
Mitsuri General	0231
Mivar	2051 1611 1371
	1141 0081
Monaco	0021